





# **INSTALLATION**INSTRUCTIONS

Not legal for sale or use in California on any pollution controlled motor vehicle.



Flat Blade Screw Driver Ratchet Extension 10mm Socket t-20 Torx 3mm Allen 4mm Allen 10mm Wrench 5/8" Wrench

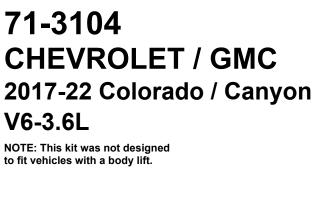

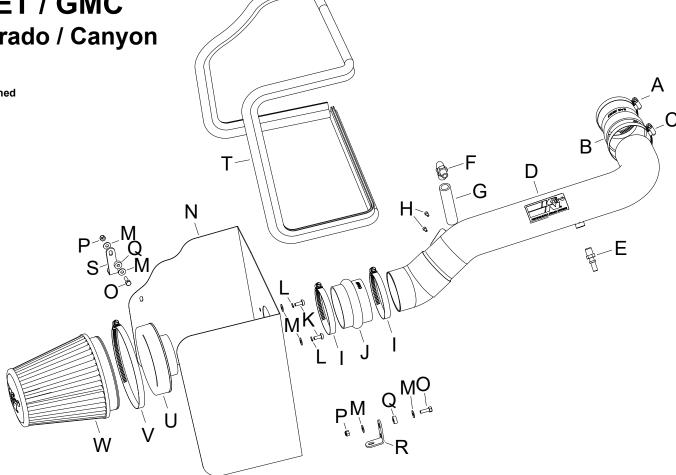

#### **PARTS LIST:**

	Description	Qty.	Part #		Description	Qty.	Part #		Description	Qty.	Part #
Α	HOSE CLAMP #48, BLK	1	08601KA	Н	BOLT; M47 X 8MM, ALNHD	2	07733	Р	NUT; 6MM NYLOCK, HEXHD	2	07512
В	HOSE; 3.25"ID TO 3"ID X 2"L	1	08186	1	HOSE CLAMP #56, BLK	2	08620KA	Q	SPACER: .625" OD X .250"ID	2	06555
С	HOSE CLAMP #52. BLK	1	08610KA	J	HOSE; HUMP 3.5"ID X 2.5"L	1	08699	R	BRACKET; SMALL	1	070015A
D	INTAKE TUBE; 3.25"OD TO 3.5"	1	27681TK	K	BOLT; M6 X 1 X 16MM, BTNHD	2	07730	S	BRACKET; "L"	1	07805A
Ε	VENT; 1/4"NPT TO .375"OD	1	08938	L	WASHER, M6 SPLIT LOCK ZINC	2	1-3025	Т	EDGE TRIM; (80"L)	1	102461
F	FITTING; VENT 1/4NPT, 90DEG.	1	08525-1	M	WASHER; 6MM FLAT	6	08269	U	ADAPTER; UNIVERSAL, 6"	1	21512-1
G	HOSE; 5/8"ID X 4"L	1	08244	Ν	HEAT SHIELD	1	073254A	V	HOSE CLAMP #104	1	08697
				0	BOLT; M6 X 1 X 20MM, HEX	2	07795	W	AIR FILTER	1	RU-3101HBK

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

### TO START:

1. Turn off the ignition and disconnect the negative battery cable.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Loosen the hose clamp that secures the intake hose to the air filter housing. Using a screwdriver, unlock the small clamp that secures the vent line to the connector and then disconnect the vent line. Remove the bolt securing the intake plenum to the



3. Remove the oil fill cap and loosen the hose clamp securing the intake hose to the throttle body. Remove the bolt securing the intake plenum to the engine.



4. Remove the front center bolt securing the intake plenum to the engine and remove the plenum from the vehicle.

NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.



5. Release the red locking tab and then disconnect the mass air sensor electrical connection and unhook the harness from the air filter housing.




6. Remove the two nuts securing the air filter housing to the inner fender and then remove the housing from the vehicle.

NOTE: One of the nuts will be reused in a later step.

## **Continued**

## **INSTALLATION INSTRUCTIONS**

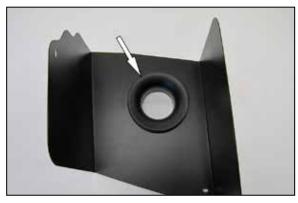

7. Install the filter adapter into the K&N® heat shield and secure with the provided hardware.



8. Install the edge trim onto the heat shield as shown.

NOTE: Some trimming of the edge trim will be necessary.



9. Install the provided heat shield mounting bracket (07805) onto the heat shield using the provided hardware and spacer.



10. Install the provided heat shield mounting bracket (070015) onto the heat shield using the provided hardware and spacer.



11. Remove the nut that secures the coolant reservoir to the inner fender.

NOTE: This nut will be reused in the next step.



12. Install the heat shield assembly into the vehicle and secure with the factory coolant reservoir nut and air box mounting nut.



13. Remove the mass air sensor from the factory air filter housing and install the sensor into the K&N® intake tube using the provided hardware.



14. Install the  $90^{\circ}$  vent fitting into the K&N<sup>®</sup> intake tube as shown.

NOTE: NPT fittings are easy to cross thread. Install the vent fitting "hand" tight, then turn it two complete turns with a wrench.



15. Install the quick connect fitting into the  $K\&N^{\otimes}$  intake tube as shown.

NOTE: Plastic NPT fittings are easy to cross thread. Install the vent fitting "hand" tight, then turn it two complete turns with a wrench.



16. Install the provided coupler (08186) onto the throttle body and secure with the provided hose clamp.



18. Install the intake tube assembly into the coupler at the filter adapter and then into the coupler on the throttle body. Adjust the tube for best fit and secure with the provided hose clamps.



19. Rotate the crank case vent line and fitting so it aligns with the quick connect fitting and then connect.



20. Using the provided vent hose, connect the factory vent to the 90° fitting installed into the K&N® intake tube. Reconnect the mass air sensor electrical connection.



21. Install the K&N® air filter onto the filter adapter and secure with the provided hose clamp.



22. Reconnect the vehicle's negative battery cable. Double check to make sure everything is tight and properly positioned before starting the vehicle.

23. It will be necessary for all K&N® high flow intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void warranty.

### **ROAD TESTING:**

- 1. Start the engine with the transmission in neutral or park, and the parking brake engaged. Listen for air leaks or odd noises. For air leaks secure hoses and connections. For odd noises, find cause and repair before proceeding. This kit will function identically to the factory system except for being louder and much more responsive.
- 2. Test drive the vehicle. Listen for odd noises or rattles and fix as necessary.
- 3. If road test is fine, you can now enjoy the added power and performance from your kit.
- 4. K&N Engineering, Inc., requires cleaning the Blackhawk Induction™ intake system's air filter element every 50,000 miles. When used in dusty or off-road environments, our filters will require cleaning more often. We recommend that you visually inspect your filter once every 25,000 miles to determine if the screen is still visible. When the screen is no longer visible some place on the filter element, it is time to clean it. To clean, purchase our Synthetic Filter Cleaner, part number 99-0624 and follow the easy instructions.