




INTAKE SYSTEM

21-883DS  
HYUNDAI  
2021-25 Elantra  
2.0L

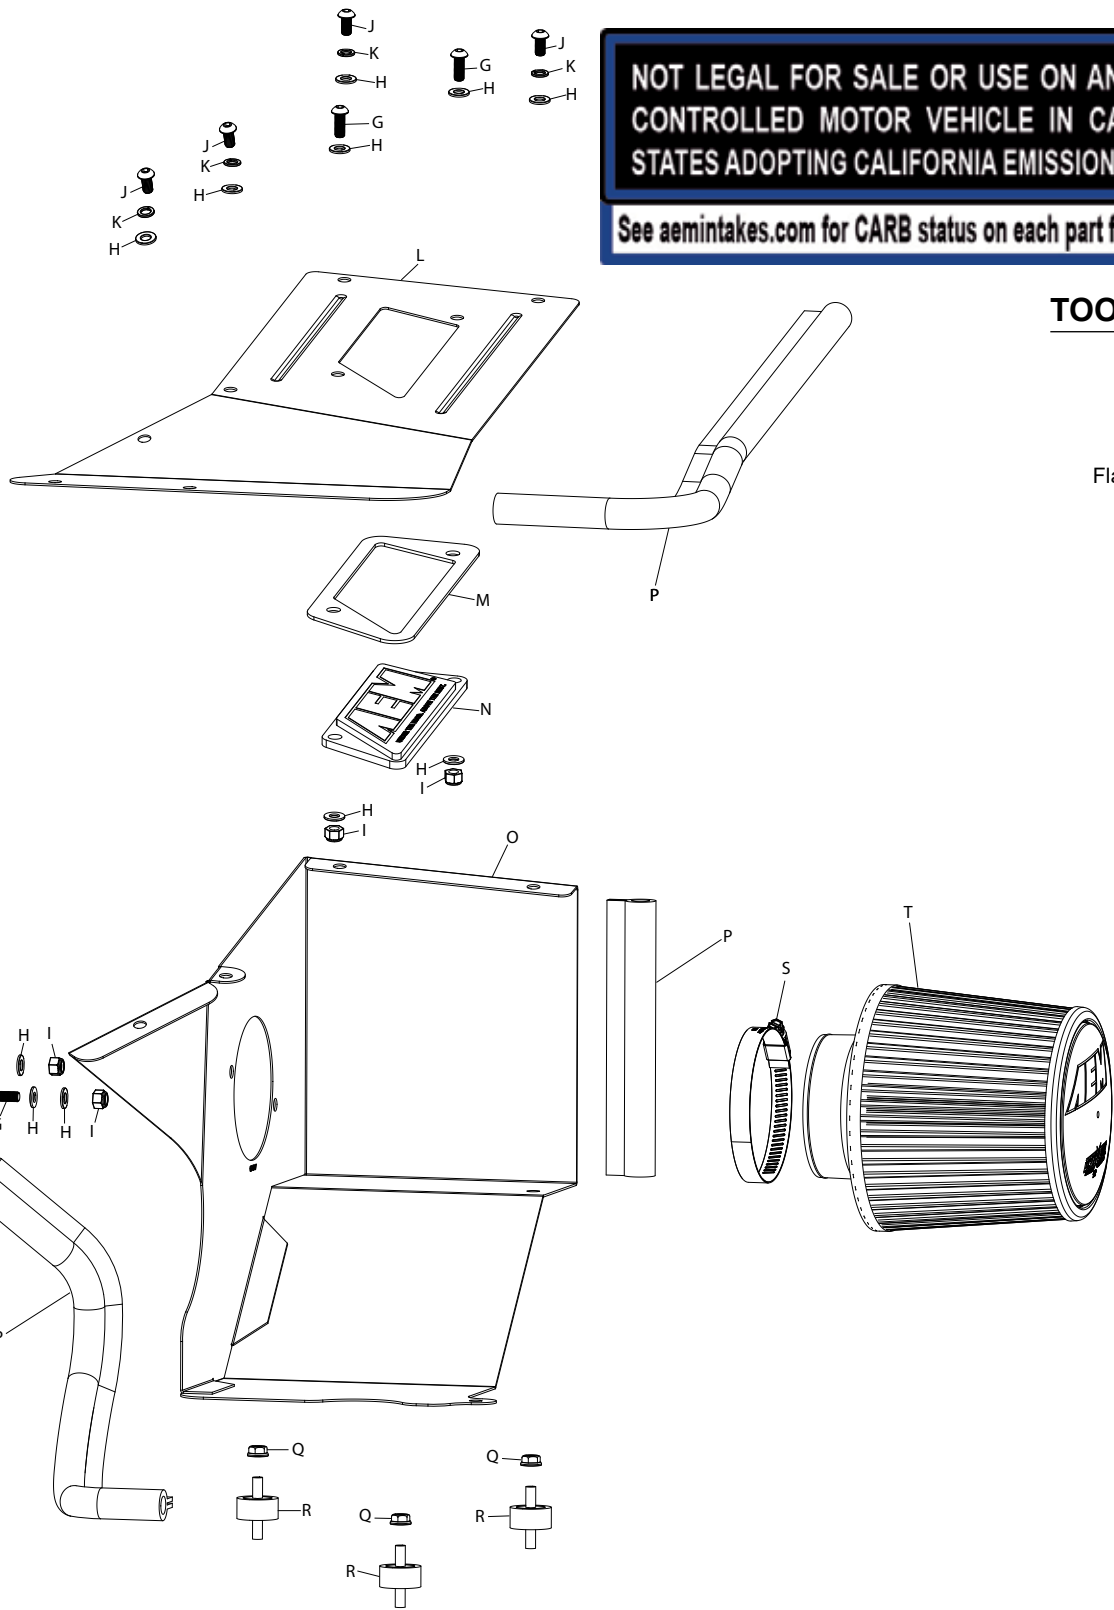

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION  
CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR  
STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.  
See [aemintakes.com](http://aemintakes.com) for CARB status on each part for a specific vehicle

TOOLS NEEDED:

- Ratchet
- Extension
- 10mm socket
- Pliers
- Phillip screw driver
- Flat blade screw driver
- 4mm allen key
- 10mm wrench

PARTS LIST:

Description	Qty.	Part #	Description	Qty.	Part #	Description	Qty.	Part #
A HOSE CLAMP; #44	2	08577	H WASHER; 6MM FLAT	12	08269	O HEAT SHIELD	1	074547
B VENT; STRT, 3/8" HOSE	1	08041	I NUT; 6MM NYLOCK	4	07512	P EDGE TRIM; 42"L	1	102499
C HOSE; 3/8"ID X 3"L	1	08462	J BOLT; M6-1 X 12MM	4	07794	Q NUT; M6, HEX	3	444.460.04
D VENT; 90DEG, 3/8 X 3/8	1	08121	K WASHER; M6 SPLIT LOCK	4	1-3025	R STUD; M6-1.00 M/M RUBBER	3	07027
E FITTING; VENT 5/8"OD	1	08048	L HEAT SHIELD; LID	1	074548	S 1/2" BNDHOSE CLAMP	1	9448
F HOSE; HUMP 2.75"ID X 5"L	1	084120	M SPACER; CLEAR BADGE	1	7-364	T AIR FILTER	1	21-202DK
G BOLT; M6 X 1 X 16MM	4	07730	N PLATE; AEM LOGO	1	8-211-1			

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Read and understand these instructions **BEFORE** attempting to install this product. Failure to follow installation instructions and not using the provided hardware may damage the intake tube, throttle body and engine.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.  
**NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.**



2. Disconnect the mass air sensor electrical connection.




3. Release the two spring clamps that secure the vent hoses and then disconnect the vent hoses from the intake system.





4. Loosen the hose clamp that secures the factory intake tube to the throttle body.

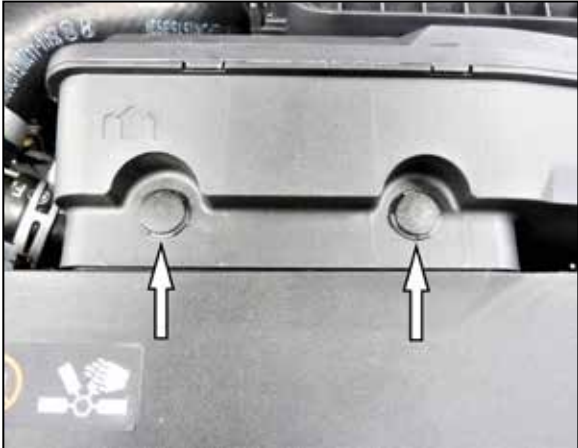

5. Pop up the centers of the fresh air duct retaining pins and then remove the pins from the vehicle.



6. Remove the lower air filter housing retaining bolt.



7. Remove the two rear air filter housing mounting bolts and then remove the complete intake assembly.



8. Remove the two bolts that secure the mass air sensor to the upper air filter housing and then remove the sensor from the housing.



9. Install the three rubber mounted studs in the places shown.



10. Cut a 7" long section of the edge trim and then install the edge trim onto the heat shield as shown trimming off access.



11. Install the heat shield assembly onto the rubber mounted studs and secure with the provided hardware.



12. Assemble the AEM intake hose assembly and vents as shown.



13. Install the factory mass air sensor into the AEM hose as shown but don't tighten the clamp.



14. Install the hose/maf housing assembly onto the throttle body and into the heat shield. Adjust the maf housing so the holes line up and secure with the provided hardware. Adjust the hose for best fit and then secure with the provided hose clamps.



15. Reconnect the vent lines and secure with the factory spring clamps. Reconnect the mass air sensor electrical connection.



16. Install the AEM air filter onto the mass air sensor and secure with the provided hose clamp.





17. Install the AEM window into the filter cover and then attach the remaining edge trim as shown, some trimming may be necessary.



18. Install the lid onto the heat shield and secure with the provided hardware.

Reassemble Vehicle

Position the inlet pipes for the best fitment. Be sure that the pipes or any other components do not contact any part of the vehicle. Tighten the rubber mount, all bolts, and hose clamps. Check for proper hood clearance. Re-adjust pipes if necessary and re-tighten them. Inspect the engine bay for any loose tools and check that all fasteners that were moved or removed are properly tightened. Reconnect negative battery terminal and start engine. Let the vehicle idle for 3 minutes. Perform a final inspection before driving the vehicle.

Service and Maintenance

AEM Induction Systems requires cleaning the intake system's air filter element every 100,000 miles. When used in dusty or off-road environments, our filters will require cleaning more often. We recommend that you visually inspect your filter once every 25,000 miles to determine if the screen is still visible. When the screen is no longer visible some place on the filter element, it is time to clean it. To clean, purchase our Synthetic air filter cleaner, part number AEM-1-1000 and follow the easy instructions. Use window cleaner to clean your powder coated AEM® intake tube.

**NOTE: DO NOT USE aluminum polish on powder coated AEM® intake tubes.**

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See [aemintakes.com](http://aemintakes.com) for CARB status on each part for a specific vehicle

AEM Air Intake System Warranty Policy

AEM® warrants that its intake systems will last for the life of your vehicle. AEM will not honor this warranty due to mechanical damage (i.e. improper installation or fitment), damage from misuse, accidents or flying debris. AEM will not warrant its powder coating if the finish has been cleaned with a hydrocarbon-based solvent. The powder coating should only be cleaned with a mild soap and water solution. Proof of purchase of both the vehicle and AEM intake system is required for redemption of a warranty claim.

This warranty is limited to the repair or replacement of the AEM part. In no event shall this warranty exceed the original purchase price of the AEM part nor shall AEM be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is nontransferable. Improper use or installation, use for racing, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM. Warranty returns will only be accepted by AEM when accompanied by a valid Return Merchandise Authorization (RMA) number. Credit for defective products will be issued pending inspection. Product must be received by AEM within 30 days of the date RMA is issued.

If you have a warranty issue, please call (800) 992-3000 and our customer service department will assist you. A proof of purchase is required for all AEM warranty claims.