



INSTALLATION INSTRUCTIONS

Part Number: YA-8518

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

* **FREE K&N® decal** To register your warranty, please see us online at knfilters.com/register. **FREE K&N® decal ***

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

INSTALLATION:

1. Open air box and remove foam pre-filter. (Fig. 1)
2. Remove the panel filter from the air box by removing the four (4) retaining screws.
3. Remove the O.E. O-ring from the flame arrestor side of the panel filter. (Fig. 2) This O-ring will be used on the K&N supplied filter base plate, part number 08354.
4. Install O-ring on K&N base plate. (Fig. 3)
5. Install the K&N base plate into the air box, circular side up, using the O.E. filter retaining screws. Do not over tighten screws. (Fig. 4) **Be sure not to drop anything into the intake tract.**
6. Install the K&N filter into the air box with tabs on the top positioned as shown. (Fig. 5)
7. Re-install the air box lid making sure to align locating tabs on the filter to the air box lid. (Fig. 6)
8. With the K&N air filter installed, clean an area on the air box and apply K&N Stop Decal. The decal will help notify others that this is a reusable air filter.

NOTE: When servicing filter, the K&N base plate does not require removal.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6

CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.